

To maintain protection levels, optimise the effective lifetime of the system and avoid the additional cost of replacement, it is extremely important to carry out regular checks and maintenance on Powered and Supplied Air Respirators.

## Before Use

- Ensure Couplings are securely fitted
- Inspect Breathing Tube ensure it is free from splits or holes. Replace if necessary
- Inspect Belt ensure it is free from splits or tears and the buckle is undamaged
- Replace Filter if odour is detected during use

## Monthly

 Carry out all the 'Before Use' inspections and create record of this monthly check for the regulator

## Six Monthly

Change Filter

REPLACE ALL DAMAGED PARTS IMMEDIATELY TO ENSURE CORRECT LEVELS OF PROTECTION

## After Use

- Clean casing with cloth dampened with a mild solution of water and liquid household soap
- Disinfect surfaces with 3M<sup>™</sup> 105 Wipes
- Store in a dry, clean area / locker away from direct sunlight, high temperatures and solvents



